 


TEAC

HMX2500

Home Entertainment Party System

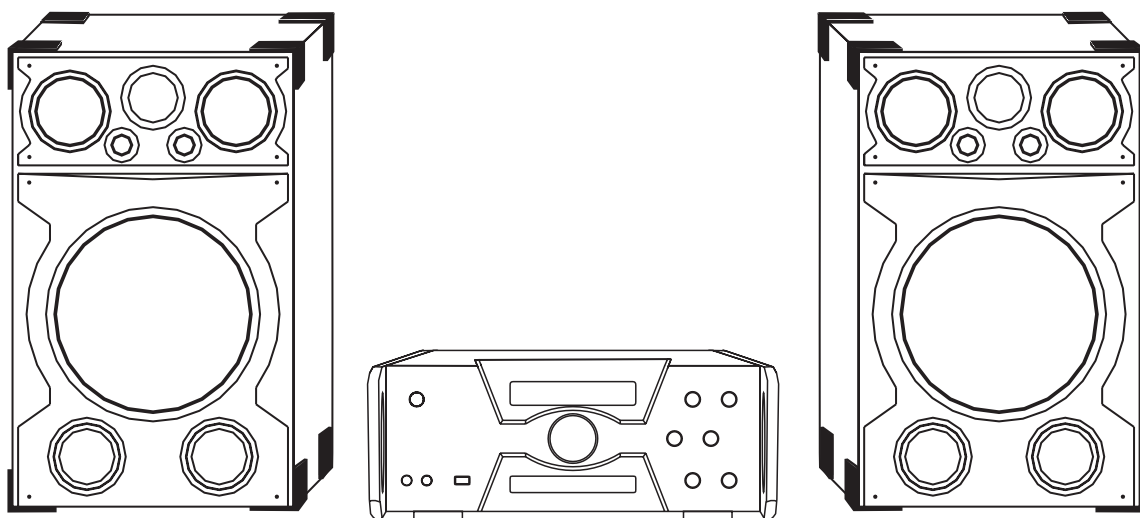

USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Warranty Service Hotline at 1300 553 315 for assistance.

Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Name	
Address	
Postcode	
Model/No.	Serial No.
Name	
Address	
Postcode	

Thank you for selecting a TEAC product.

If your TEAC product malfunctions, please call us directly for warranty support between Monday to Friday at 8.30AM – 6PM AEST at the

TEAC Warranty Service Hotline
1300 553 315

For other enquiries, please contact us at:

support@teac.com.au

www.teac.com.au

When calling to receive warranty service, please have:

1. **Your model and serial number**
2. **Proof of purchase**
3. **And your product in front of you**

NOTE:

- You are required to provide a copy of your proof of purchase in order to have your claim processed.
- You can check whether your product is entitled to a 3-year warranty on www.teac.com.au
- Please read the Terms and Conditions for details of your warranty entitlement.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to 2014 TEAC products purchased NEW from a TEAC Authorised Retailer in Australia. This warranty only applies to the original purchaser and cannot be transferred.
2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.
3. Refund or replacement via your TEAC Authorised Retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.
4. Subject to the terms herein, this warranty effectively covers TEAC product models released in 2014, excluding products purchased for commercial purposes, as specified in the Warranty Periods Table below from the date of purchase. TEAC models released before 2014 shall be covered under TEAC Warranty v1.5.2 (DEC 2011). Commercial use products are covered for 12 months only (Authorised Service Centre).

TEAC PRODUCT excluding commercial use products	SIZE (TV)	WARRANTY PERIOD from date of purchase	WARRANTY SERVICE TYPE
LED/LCD TV (Without built in Blu-ray / DVD player)	42" and above	0 to 12 months	In-home service*
		13 to 36 months	Authorised Service Centre Service
	32" to 40"	36 months	Authorised Service Centre Service
	Below 32"	12 months	Authorised Service Centre Service
LED/LCD TV (With built in Blu-ray / DVD player)	42" and above	12 months	In-home service*
	19" to 40"	12 months	Authorised Service Centre Service
All other TEAC products	N/A	12 months	Authorised Service Centre Service

Please refer to www.teac.com.au for verification of 2014 models.

5. In Home Service/Pick up* Service

This service will only be provided as part of this warranty if all the following conditions are met;

- a) The product is indicated in the Warranty Period Table.
- b) The product is within the warranty period.
- c) The product is located within the normal service area of the local TEAC Authorised Service Centre.

If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

Authorised Service Centre Service

The purchaser is required to send the product at their own expense to the nearest TEAC Authorised Service Centre for repair. In this event, proof of purchase is required to support a warranty claim. After the repair, the product will be available for collection by or return to the purchaser at a fee upon request. TEAC in-home service can be made available at a fee upon request.

6. A 12-month replacement warranty is applicable to all Accessories such as Remotes, Power Adapters and Cables.
7. TEAC will ensure to the best of its abilities that all required parts are made available for any required service/repair.
8. TEAC Australia Pty Ltd and its Authorised Service Centres will use their best endeavours to complete product repairs within a reasonable period based on available resources and workload during the time when service is requested and performed.
9. Refurbished parts may be used to repair the product. In the case of a replacement, the product may be replaced, with a refurbished unit of the same type or, if one is unavailable, a similar refurbished model with equal or better features and specifications.
10. Please be advised that if the product presented for repair is capable of retaining user-generated data, the data may be lost during servicing. Customers are strongly encouraged to back up all important information/data before sending the product in for service/repair.
11. Service will be provided only during normal business hours and under safety conditions and circumstances. TEAC and its authorised service agents can refuse any repair if safety, in relation to OH&S, becomes a concern to its staff or authorised service agents' personnel.
12. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
 - a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
 - b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
 - c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product, cockroach infestations, or
 - d) The customer is unable to provide proof of purchase of the product for verification, or
 - e) The serial number of the product is missing or has been tampered with.
13. Where any repairs or services required that are outside of the terms and conditions of this Warranty are requested by the customer, or where a fault is determined to be outside of the terms and conditions of the Warranty during an In-Home Service call, the customer shall be charged for the cost of the repair and/or the In-Home service call fee.
14. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
15. TEAC and/or its Authorised Service Centres reserve the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.
16. LCD dead pixel policy, please contact TEAC at support@teac.com.au for assistance.

CAUTION:

To reduce the risk of electric shock, do not remove the cover. Refer servicing to qualified service personnel. Please read the manual carefully before operating. Keep it in a safe place for future reference.

Water Damage:

The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on the apparatus.

Disconnection:

The mains plug is used as the disconnect device, the disconnect device must remain readily operable.

Class 1 Apparatus:

Apparatus with class 1 construction must be connected to a mains socket outlet with a protective earthing connection.

USER INSTRUCTIONS FOR DVD PLAYER

Please Do Not :

- Put the player in sunshine, on or next to any radiation devices such as heaters, stoves or other appliances that produce heat
- Put the player in badly ventilated, dusty or high moisture areas or in unsteady or vibrating place.
- Expose the unit to rain or water
- Play discs that are scratched or warped as they may damage the unit.

POWER SUPPLY

- The power supply required is AC 240V~, 50Hz (**set the voltage selector to suitable position first**).
- When not planning to use this unit for long periods of time, disconnect the AC power plug from the outlet.
- To prolong its life, the changeover period between switch-on and switch-off should not be less than ten seconds.

DVD PLAYER FEATURES

1. Fully compatible with DVD, SVCD, VCD, Mp3 CD-R and CD-RW with high error correction ability.
2. Reads picture CD to realize digital picture display.
3. 10 bit digital video converter, resolution is more than 500 lines.
4. 24bit/96KHz digital audio converter, high quality sound effects, professional Hi-Fi level.
5. Video component signal output, S-video output, Composite video output, Optical, Coaxial HDMI and YUV output for selection.
6. Eight languages and 32 caption modes can be selected.
7. Various TV screen display selection and preferred story selection to view.

LASER HEAD OVER CURRENT PROTECTION SYSTEM

Laser head is the most important and critical part of the whole machine. Its performance is directly linked to the whole equipment's service life and error correction function. When a common player reads a scratched disc or a non-standard disc, the laser intensity will be 2-4 times or even up to 20 times the normal level, thus greatly reducing its service life. This appliance is provided with a unique laser head over current protection system, which will ensure constant laser current and thus greatly extend the service life of the laser head.

USB Usage Precautions

Never turn the unit off or disconnect a USB Storage Device (Flash Drive) when it is being accessed. Doing so could damage the unit and the connected USB storage device.

- Do not use a device that has a maximum current consumption of 100 mA or more.
- Do not use a device that has security functions or other special functions.
- Do not use a device that is divided into two or more partitions.
- A USB hub cannot be used to connect USB devices to this unit.

USB storage devices that can be played on this unit

 
- Only USB Storage Device (Flash Memory) maximum 16GB can be used. Do NOT use a high-capacity USB hard disk with this unit.
- Some flash memory players that charge from USB terminals cannot be used for playback.
- Hard disk drives, CD/DVD Drives, and other devices connected via USB cannot be used.
- This unit cannot copy or move files.
- Playable formats: FAT12, FAT16, FAT32
- Depending on the condition of the USB flash drive, this unit might not be able to play the files on it or skipping might occur.
- NTFS, HFS and HFS+ formats are not supported and cannot be used.
- Max. number of playable folders: 200
- Max. number of playable files: 999
- If the USB storage device contains more than 999 files or 200 folders, this unit cannot play it back correctly.
- This unit cannot play files that are larger than 2GB.
- Files with variable bit rates might not play correctly.

File information display

- The display of this unit can only show single-byte letters and numbers.
 - If the file information contains Japanese, Chinese or other double-byte characters, playback is possible but the name will not be shown correctly.
-


1.Controls

FRONT PANEL

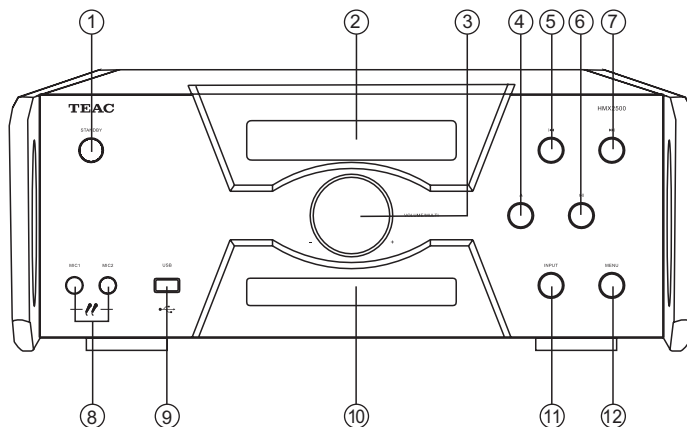


- | | |
|----------------------|----------------------|
| 1.STANDBY | 7.NEXT▶▶/TUNING+ |
| 2.VFD DISPLAY | 8.MICROPHONE1&2 JACK |
| 3.VOLUME/MULTI | 9.USB PORT |
| 4.OPEN/CLOSE | 10.COMPARTMENT DOOR |
| 5.PREVIOUS◀◀/TUNING- | 11.INPUT |
| 6.PLAY/PAUSE | 12.MENU |

 REAR PANEL

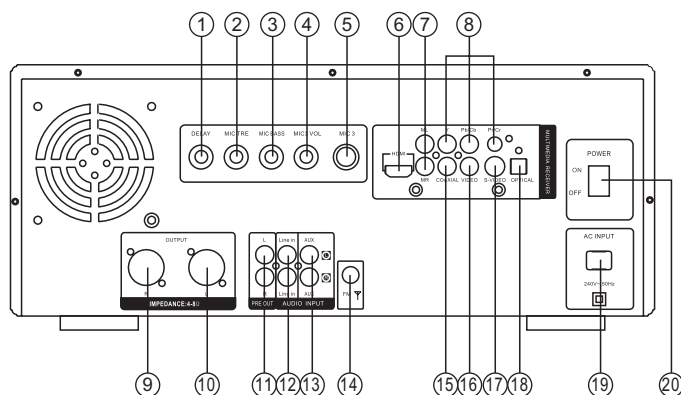


- | | |
|------------------------------------|----------------------------------|
| 1.ADJUST MICROPHONE DELAY | 11.AUDIO LINE OUTPUT |
| 2.ADJUST MICROPHONE TREBLE | 12.LINE AUDIO INPUT |
| 3.ADJUST MICROPHONE BASS | 13.AUX AUDIO INPUT |
| 4.MICROPHONE 3 VOLUME | 14.FM ANTENNA JACK |
| 5.MICROPHONE 3 INPUT JACK | 15.DIGITAL SIGNAL COAXIAL OUTPUT |
| 6.HDMI OUTPUT JACK | 16.VIDEO OUTPUT JACK |
| 7.AUDIO OUTPUT JACK | 17.S-VIDEO OUTPUT JACK |
| 8.COMPONENT(YUV) VIDEO OUTPUT JACK | 18.DIGITAL SIGNAL OPTICAL OUTPUT |
| 9.RIGHT SPEAKER OUTPUT JACK | 19.AC INPUT(240V~,50Hz) |
| 10.LEFT SPEAKER OUTPUT JACK | 20.POWER SWITCH |

 Remote Control

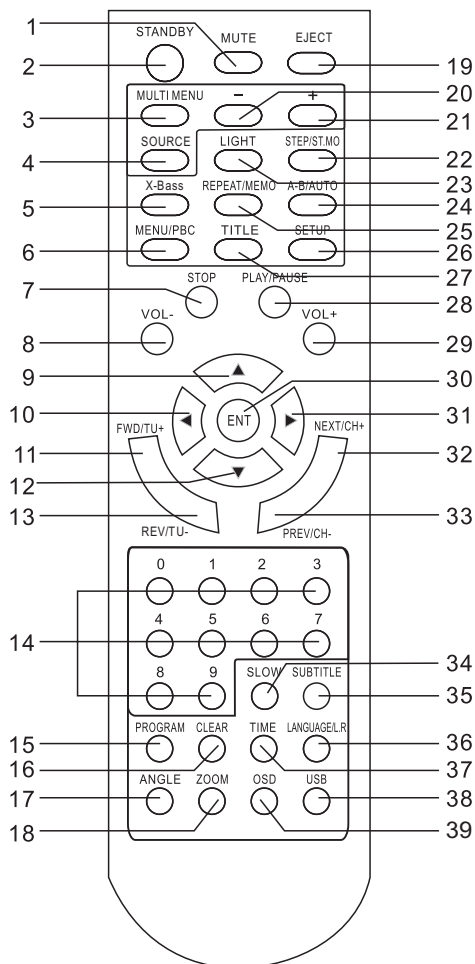

 1. MUTE
2. STANDBY
3. MULTI MENU
4. SOURCE
5. X-Bass ON/OFF
6. MENU/PBC
7. STOP
8. VOLUME-
9. UP
10. LEFT
11. F.WARD ►►/TUNING+
12. DOWN
13. B.WARD ◄◄/TUNING-
14. NUMBER BUTTON
15. PROGRAM
16. CLEAR
17. ANGLE
18. ZOOM
19. EJECT
20. MULTI MENU ADJUST-
21. MULTI MENU ADJUST+
22. STEP/STEREO/MONO
23. SPEAKER LIGHT
24. A-B/AUTO(TUNER)
25. REPEAT/MEMO(TUNER)
26. SETUP
27. TITLE
28. PLAY/PAUSE
29. VOLUME+
30. ENTER
31. RIGHT
32. NEXT ►►/CHANNEL+
33. PREV ◄◄/CHANNEL-
34. SLOW
35. SUBTITLE
36. LANGUAGE/L/R
37. TIME
38. USB
39. OSD

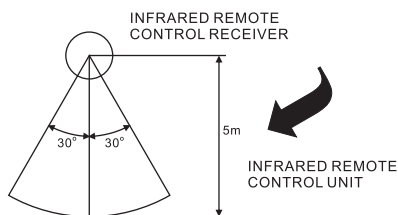

REMOTE CONTROL OPERATION:

- ☐ If the remote control conflicts with other devices, the operation will be affected.
- ☐ Do not simultaneously press buttons on the unit and the remote control.
- ☐ Avoid using two remote controls at the same time as this will cause a malfunction.
- ☐ Use only UM-4 ``AAA`` size batteries. Do not mix old batteries with new ones.
- ☐ If the batteries leak, clean thoroughly before replacing with new ones.
- ☐ Do not short two terminals of the batteries. Dispose of old batteries in a suitable place.

Do not place the amplifier unit on top of the speakers the vibrations may damage the unit and void the warranty.

3. Disc Basic Operation

 
Once all the connections and settings have been made, the DVD unit is ready for normal use. Prior to playback, make sure the following operations have been carried out.

1. Switch on the TV and select suitable mode.
e.g.:If connected by S-Video, then select S-Video mode.
2. Switch on this DVD unit.
3. Press the INPUT key on the front panel
or on the remote control and select DISC.


LOADING will be shown on the screen:



If there is no disc, NO DISC will be shown on the screen:

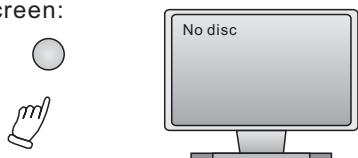

 Step 2: Press the OPEN/CLOSE key, the tray comes out automatically.

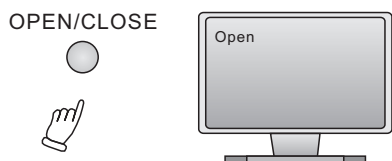

Step 3: Place the disc on the tray, press OPEN/CLOSE to close the tray, the disc type will be shown on the VFD screen.

3.1 Play disc

Insert a disc into the DVD unit and it will start playing automatically. Press PLAY/PAUSE to temporary stop playback, press it again to resume.



Press PAUSE key:



Press NEXT or PREV to jump to next or previous track/chapter/file.

 
Press PREV key:




Press NEXT key:



Press F.WARD & B.WARD key to get 2X, 4X, 8X, 16X, 32X, normal play circular fast forward & backward function

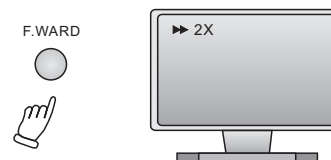

 Press STOP key once to enable memory stop.
Press PLAY to execute continuous place back.
Press STOP key twice to stop playback.

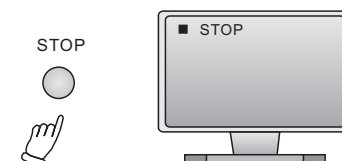

NOTE: All images in this manual are illustrations for reference only.

 
4. DVD Description of Functions

4.1 Subtitle

This DVD function enables you to select multi subtitle languages (Depending on the disc encoded).

Press SUBTITLE key to get the desired display. For example, select language 1- English from 8 options.

SUBTITLE

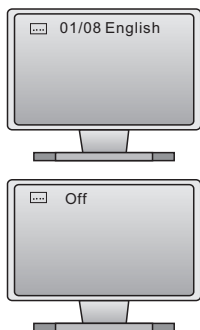

4.2 Title

Press the TITLE key to get the title menu. (This operation works only for multi title encoded discs).

4.3 Menu

Press the MENU key on remote to return to the main menu.

4.4 Direction keys

While playing discs, the four direction keys (up, down, left, right) enable you to select your options in title, menu or setup.

 
4.5 Number keys

Press the relevant number key for direct access according to titles.

4.6 Time

While playing a DISC, press the TIME key repeatedly, the following will be displayed depending on which type of disc playing:

TIME

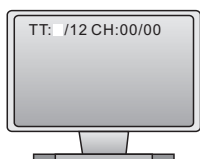

Select direct time by pressing a number in the subtitle chapter, then press the relevant key.

TIME



You may press the number buttons to enter the desired playing time, chapter or track number. For example 55:50, stands for 55 minutes and 50 seconds.

 
4.7 PBC play

In PBC ON mode (press MENU/PBC FOR vcd 2.0), song selection can only be made in the main menu.

4.8 Repeat from A to B


Press A-B key once to set the initial point (A):

A-B

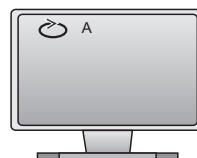

Press A-B key again to set the end point (B):




 
A-B

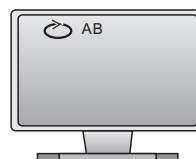




NOTE: All images in this manual are illustrations for reference only.

4.9 Repeat

    In DVD mode, press the REPEAT key. The following will be displayed:

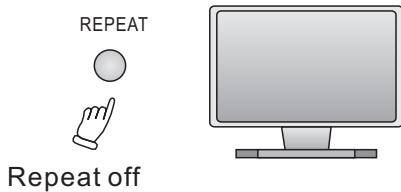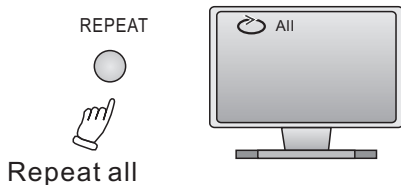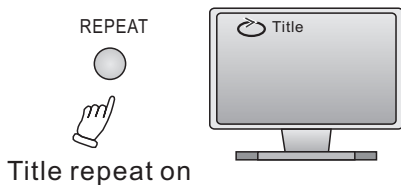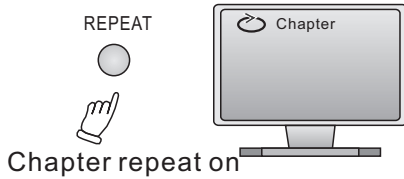

   In SVCD/VCD/CD mode, press the PBC key to access PBC off for VCD 2.0, press the REPEAT key and the following will be displayed:

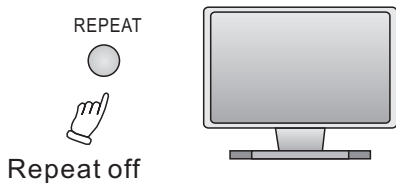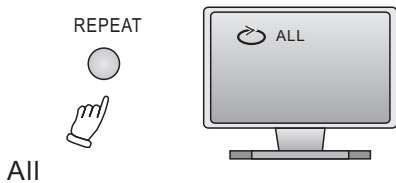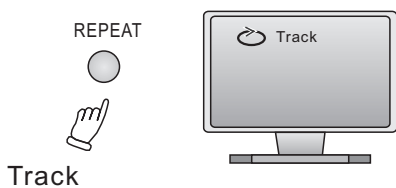

4.10 Zoom

The picture may be enlarged to facilitate your enjoyment of a particular action.

Press this button repeatedly, the zoom scales will be change respectively.

4.11 Angle

Press the ANGLE key continuously on the remote control to view various angles of the same image (This operation works only for discs that are multi angle encoded).



 
4.12 Mute

Press the MUTE key on the remote control to mute the sound, press it again to resume normal sound.

NOTE: All images in this manual are illustrations for reference only.

5. Settings

Press the SETUP button on the remote control, the SETUP MENU (main) will be displayed.

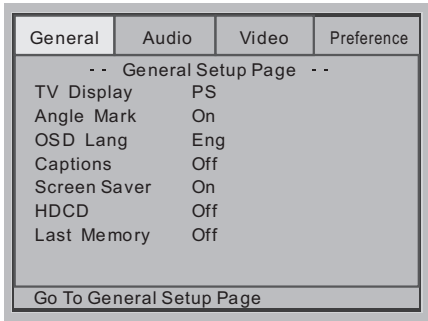


- 1. Press the LEFT or RIGHT arrow buttons to highlight the icon of the desired page, then press the DOWN arrow button to access that page.
Press the DOWN arrow button to highlight the desired option. Press ENT to select the various options.
- 2. Press the LEFT arrow buttons to exit the option, press SETUP again to exit the Setup Menu.

5.1 General setup

5.1.1 TV display

 
The system setup options are illustrated below:

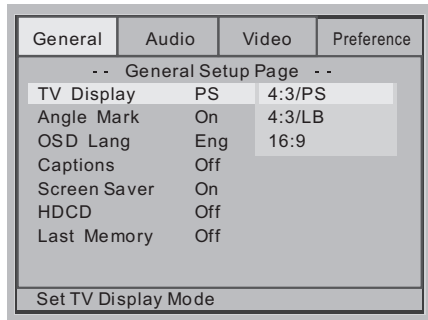

Highlight the TV DISPLAY mode option and press the arrow buttons to choose the TV display mode that you prefer. Press ENTER to confirm.

5.1.2 Language

 
The system setup options are illustrated below:

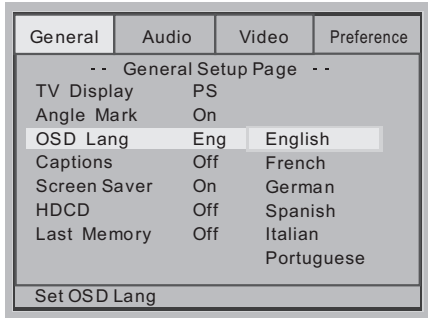

The user may set the language of screen displays, subtitles, audio and DVD menus.

5.1.3 Screen Saver

 
The system setup options are illustrated below:

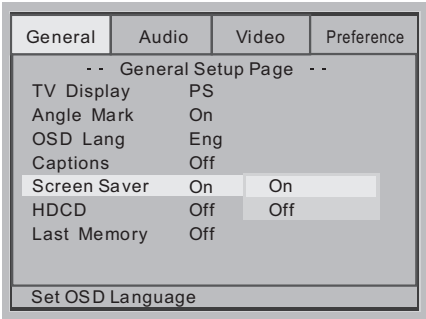

The user may set the Screen Saver on or off.

5.2 Audio setup

 Audio setup includes: Speaker setup, Spdif setup, CH EQ setup, 3D processing.

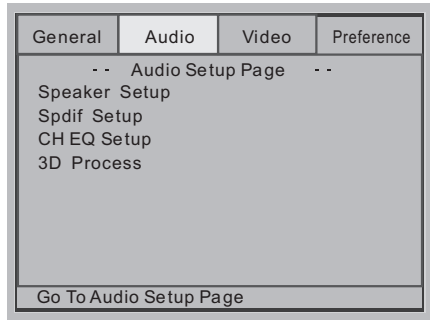

5.2.1 Speaker setup

 
5.2.1.1 Downmix

a) LT/RT

A disc recorded multi-channel soundtrack, the output signal will be incorporated to "left total/light total"

b) STEREO


A disc recorded multi-channel soundtrack, the output signal will be incorporated to "STEREO"

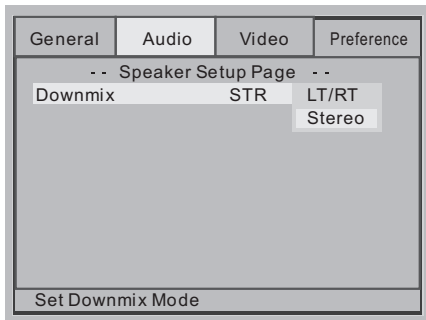

NOTE: All images in this manual are illustrations for reference only.

5.3.1 Spdif output

 The system setup options are illustrated below:

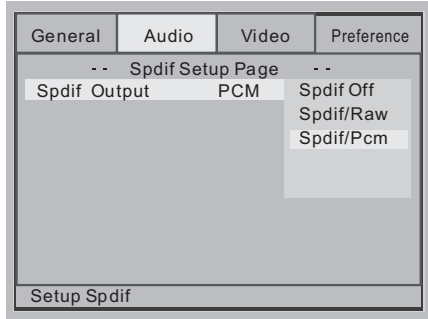


Highlight the Spdif option and press the arrow buttons to choose the Spdif output that you prefer. There are 3 optional modes: Spdif Off, Spdif/Raw, and Spdif/Pcm.

- a) Spdif Off: No signal is outputted from the Coaxial Output jack and the Optical Output jack.
- b) Spdif/Raw: Choose this setting if your DVD player is connected to a disc recorded with Dolby Digital, DTS and MPEG audio formats. The corresponding digital signals will be outputted from the Coaxial Output jack or Optical Output jack. This player's digital output jacks are designed for connection to a Dolby Digital, DTS or MPEG receiver or decoder.
- c) Spdif/Pcm: Choose this setting if your DVD player is connected to a 2-channel digital stereo amplifier. When playing a disc recorded with Dolby Digital and MPEG audio formats, audio signals will be modulated into a 2-channel PCM signal and will be outputted from the Coaxial Output jack or Optical Output jack.

5.3.2 EQ setup

 
The system setup options are illustrated below:

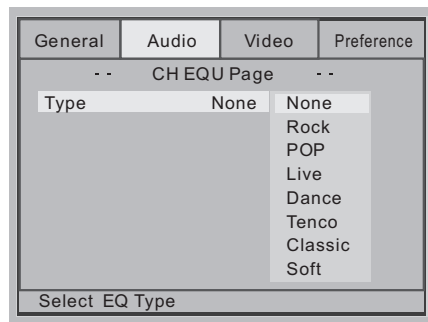

Highlight TYPE and press the arrow buttons and ENT to choose EQUALIZER type. There are 8 EQ types: None, Rock, POP, Live, Dance, Tenco, Classic, Soft.

5.3.3 3D Process setup

 The system setup options are illustrated below:

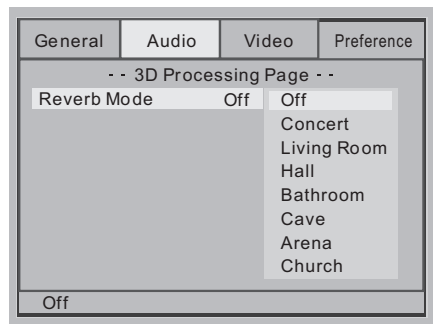


Reverb Mode is set to Off, Concert, Living Room, Hall, Bathroom, Cave, Arena, Church mode.

NOTE: All images in this manual are illustrations for reference only.

5.4 Video setup

 
The system setup options are illustrated below:

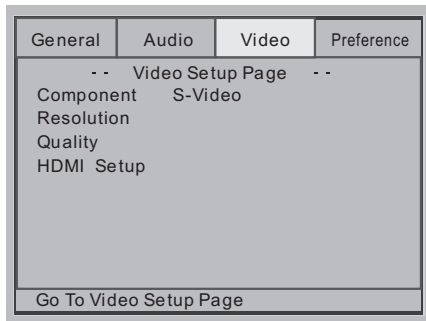

Video Setup includes: Component, Resolution, Quality, HDMI Setup.

5.4.2 Resolution

 
The system setup options are illustrated below:

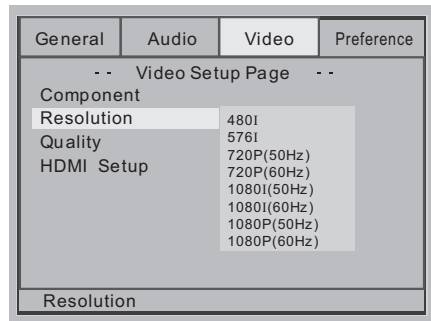

Resolution is set to 480I,576I,720P(50Hz), 720P(60Hz),1080I(50Hz),1080I(60Hz), 1080P(50Hz),1080P(60Hz).

5.4.1 Component

 
The system setup options are illustrated below:

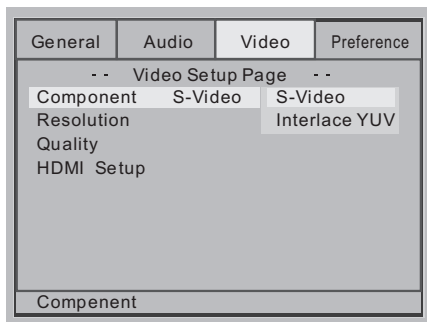

Component is set to S-Video or Interlace YUV.

5.4.3 Quality

 The system setup options are illustrated below:

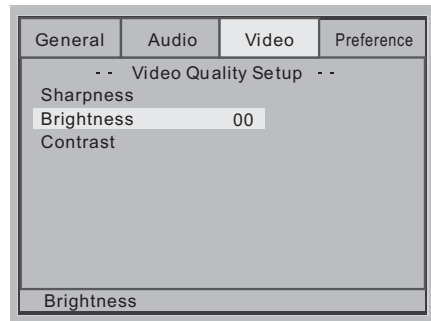

Set the sharpness,brightness and contrast depending on your preference.

NOTE: All images in this manual are illustrations for reference only.

5.4.4 HDMI setup

The system setup options are illustrated below:
Choose HDMI ON or OFF.

General	Audio	Video	Preference
-- HDMI Setup Page --			
HDMI		On	On
Audio Source		AUTO	Off
HDMI			

Choose Audio Source AUTO or PCM.

General	Audio	Video	Preference
-- HDMI Setup Page --			
HDMI		On	
Audio Source		AUTO	AUTO
			PCM
Audio Source			

5.5 Preference

Highlight the Preference option.
The system setup options are illustrated below:

General	Audio	Video	Preference
-- Preference Page --			
TV Type		PAL	
Audio		Eng	
Subtitle		Eng	
Disc Menu		Eng	
Parental			
Password			
Default			
Go To Preference Page			

Set up the Preference page.

Choose PAL or NTSC for TV type.
Select your prefer language for Audio, Subtitled,
Disc Menu.

5.5.1 Password setup

Set the password.

General	Audio	Video	Preference
-- Password Setup Page --			
Password Mode		On	On
Password			Off
Go To Password Mode			

Select Password Mode ON.

General	Audio	Video	Preference
-- Password Setup Page --			
Password Mode		On	
Password			Change
Go To Password Mode			

The default old password is 0000.

5.5.2 Default

If you want to reset the system(default value),
highlight the RESET option and press ENTER
to confirm.

General	Audio	Video	Preference
-- Preference Page --			
TV Type		PAL	
Audio		Eng	
Subtitle		Eng	
Disc Menu		Eng	
Parental			
Password			
Default		Reset	
Load Factory Setting			

※NOTE: All pictures in this manual as
reference only.

6. Operating the DVD unit

6.1. Operating the Mp3 function

To play a Mp3 disc

Select the track using numbered buttons

1. Instructions to insert a Mp3 disc. This machine will start to search for the information on the disc and show it in the display.
2. Press the number buttons to select the track number desired.
3. Press the DIRECTION key (up, down, left, right) to select desired files, press ENTER or PLAY keys to play.

Repeat play

Using this function, the user will be able to enjoy a particular song or all the songs on the disc over and over again.

1. Choose a particular song to be repeated.
2. Press the REPEAT button repeatedly to show "repeat one" / "repeat folder" and "repeat off" on the TV screen.
3. In STOP mode, press PROGRAM to change to Filelist or Folder List.
In Filelist mode press RIGHT key to add files to playlist.
Then press PROGRAM into the Playlist menu. In the playlist menu, you can enjoy the playback of the selected files or press LEFT to delete the added file.

Other functions:

When a Mp3 disc is played, the features of mute, volume control, pause, forward and backward search are available. Features are the same as those of CDs.

6.2. JPEG

Select to play by menu

1. Insert a disc, the machine searches for disc information and the main menu displays on the screen. Press a direction key to select a picture. Press the PLAY key to enter play mode. Press STOP to exit play mode.
2. In PLAY mode, press LEFT & RIGHT to rotate pictures, UP & DOWN to show mirror image.

6.3. Function of USB reader

USB interface

This DVD unit has a USB jack. Press the INPUT key to select Disc, then you can insert a USB and press USB key to play Mp3 music, MPG4 or JPEG files in USB (operation is similar to MP3 disc).

Important: The USB port is intended only for data transfer only, other devices cannot be used with this USB connection. The use of USB extension cords is not recommended.

6.4. Disc protection

Protection

- a. When loading or removing a disc, hold it in the centre and on the edge.
- b. Do not stick or write anything on the surface. Protect discs against any finger prints.

Cleaning

Wipe the discs from time to time using a soft cloth. Always wipe from the centre toward the edge.

Storage

- a. Never warp the discs. During non-use periods, store them in their cases, which should be kept vertically. Do not expose discs to high temperature, dampness or extremely low temperature, as this may cause damage to the discs.
- b. Do not expose discs to direct sunlight.

7.Operating the Amplifier

7.1. Normal function

1. Be sure to switch off the power and to connect the outputs to corresponding input jacks.
2. Turn on the power and wait 3-4 seconds until the speaker functions are connected.
3. Select an audio source by pressing the INPUT key on the front panel or on the remote control to display AUX,LINE IN,DISC/USB,BT,TUNER.
4. Adjust the VOLUME/MULTI knob on the front panel or the VOL+/- key on the remote control to adjust the setting of the main volume.
5. Press the MENU key on the front panel or the MULTI MENU key on the remote control to display TREBLE, MIC MENU then adjust the knob or press MULTI MENU adjust +/- to increase or decrease music treble,bass,and MIC effect.
6. Press the MUTE key on the remote control to mute, press it again to reset.
Press X-Bass on the remote to turn on/off X-Bass effect.
7. In disc playback,press the SUBTITLE key to copy music or picture to USB.

7.2. Tuner applications

- 1.Before using the radio functions, you must attach the supplied antenna. Adjust the antenna to obtain optimum reception.
Press the INPUT key on the front panel(amplifier)or on the remote control,to select " FM " function.
2. Press the CH+-CH- key on the remote control to find radio bands that you have previously saved .
3. Press or hold the TU+/- TU- key on the remote control to adjust the radio frequency manually.
4. Press the AUTO key on the remote control, the machine will scan radio channels from low-frequency to high-frequency by itself and memorize the channels one by one.
5. Press the MEMO key on the remote control and it will memorize the current radio frequency on the band. Press the number buttons to set desired programed number. The machine can memorize at most 40 FM radio bands.
6. In FM mode, press the ST.MO key on the remote control to select STEREO or MONO.

7.3.KARAOKE function

1. The machine can auto detect whether MIC1,MIC2 or MIC3 is inserted.
Please turn off the microphone volume and adjust the volume gradually after inserting the microphone.
 2. Press MIC.MENU on the remote control to display MVOL, then press +/- ,to change the microphone VOLUME.
 3. Press MIC.MENU on the remote control to display ECHO, then press +/-, to change the microphone ECHO. For MIC3,you can use the MIC3 volume knob to adjust its volume.
 4. You can use the delay,treble & bass knob on the rear panel to adjust all MIC effect.
- Note: Do not touch the top of the microphone when singing in order to avoid howling effect.
Adjust the microphone volume gradually to avoid howling effect.

7.4.Bluetooth pair and connect

- Turn off any Bluetooth devices previously paired (linked) with this unit.
- Turn on the Bluetooth features on your phone or music player.
- Turn on and set this unit to Bluetooth mode. The flashing blue light around the VOLUME/MULTI knob indicates it is in pairing mode.
- Set your phone or music player to search for Bluetooth devices.
- Select TEAC HMX2500 from search results on your phone or music player.
- Select OK or YES to pair this unit with your phone or music player.
- If protected, enter 0000 for passkey steady blue light indicates successful connection.

8. Troubleshooting Guide

For your convenience, we have listed some points to help solve problems that you may encounter while using your DVD player.

No sound

- Make sure that there is a good connection between the player and other appliances such as the power amplifier or the TV.
- Make sure that you are operating the TV and the power amplifier correctly.

No picture

- Make sure that there is a good connection between the player and other appliances such as the TV.
- Make sure the TV is switched on and the correct AV input is selected.

Disc does not play

- Make sure the disc is loaded correctly(label side is facing up on the disc tray.)
- Make sure the disc is clean.

Remote control does not work

- Remove any obstacles between the player and the remote control.
- Point the remote control at the remote control sensor.
- Check the batteries.

Picture dividing

- Make sure the disc is clean and not scratched.
- If the player is controlled by a micro-computer and encounters problems,switch the power off, wait a few seconds and then switch it on again. If no error message is displayed, the player should work properly.

9. Technical Specifications

Type	Amplifier/DVD
Play mode	NTSC/PAL-M/PAL-N
Disc mode	DVD,DVD+R/RW,CD,CD-R/RW,HDCCD,MP3,MPEG4
Video characteristic	
Resolution	≥500 lines
Video S/N ratio	≥56dB
Audio characteristic	
Max Power	2500W
FM frequency	87-108MHz
Audio S/N ratio	≥86dB
Dynamic range	≥90dB
Distortion	<0.1% (Max)
D/A converter	192KHz/24bit
Output characteristic	
Video output	Composite video, S-Video, Component video(Y,Cb,Cr),HDMI
Audio input	2.0CH,LINE IN,AUX,DISC/USB,BT
Digital audio output	Coaxial, Optical
Power voltage	AC 240V~,50Hz
Power consumption	≤300W

* Specifications are subject to change.

CAUTION

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Minimum distances 10 cm around the apparatus for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains completely.
- The main plug of apparatus should not be obstructed or should be easily accessed during intended use.
- The use of apparatus in tropical climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



This unit contains no user serviceable parts inside. Do not attempt to repair the unit yourself. Please refer servicing to a qualified service personnel.

TEAC

In the event of a product failure within the warranty period, please call the

TEAC Warranty Service Hotline

1300 553 315

Between Monday to Friday - 8.30AM to 5PM AEST

*Please have your purchase receipt and the product's serial number ready

For other enquiries and support please email
support@teac.com.au